HOME
DECORATORS
C O L L E C T I O N

HDC# 11406 MFG# TW-18723BK/TW-18723WE
MODERNA DELUXE VANITY 31"Hx42"Wx21"D

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.

Made In China

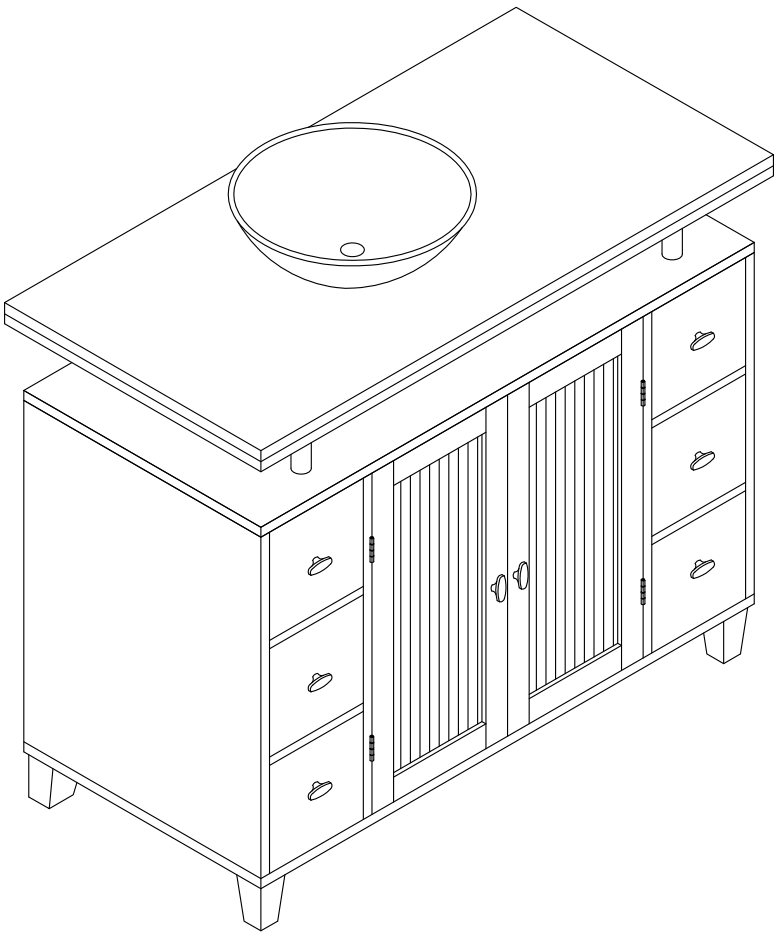

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

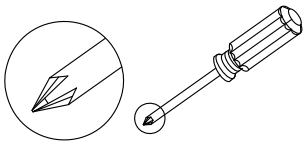

"+"Screw driver

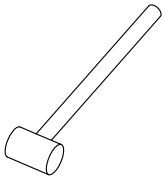

Rubber Mallet

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

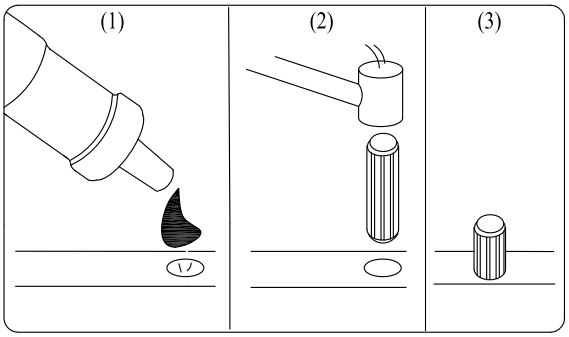

HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.
TOOL NEEDED: ″+″ SCREW DRIVER
STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A ″+″ SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).
STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER MALLET GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.
STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A ″+″ SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.

VERTICAL CONNECTION		HORIZONTAL CONNECTION	
(1) (A) 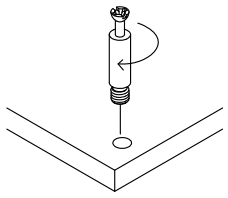	(2) 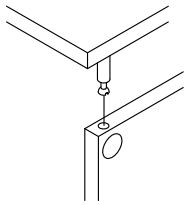	(1) (A) 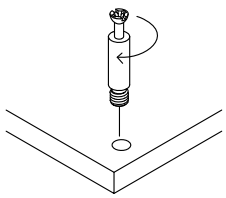	(2) 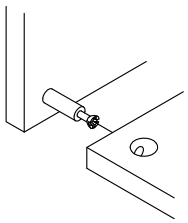
(3) 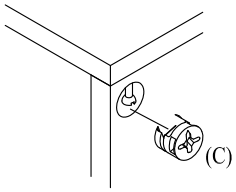 (C)	(4) 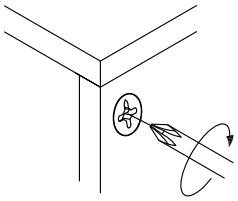	(3) (C) 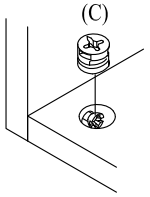	(4) 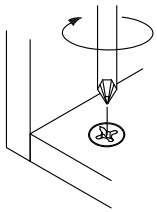
(5) 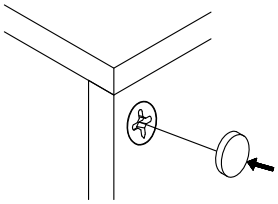		(5) 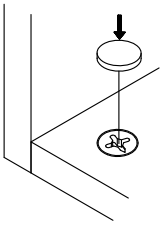	

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

HARDWARE LIST

WOOD DOWEL 32 PCS  ϕ8X30mm (1)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 16 SETS  ϕ6X32mm (2)	CAM-BOLT CAM-LOCK 40 SETS  (3)	KNOB BOLT 8 SETS  ϕ3x19mm (4)	HINGE FLAT HEAD SCREW 4 SETS 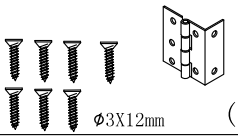 ϕ3X12mm (5)
MAGNET LOCK ROUND HEAD SCREW 1 SET  ϕ3X12mm (6)	IRON SLICE FLAT HEAD SCREW 2 SETS ϕ3X12mm (7)	ROUND HEAD SCREW 14 PCS ϕ3X12mm (8)	SHELF HOLDER 4 PCS (9)	DRAINER 1 SET 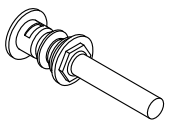 (10)
(CONDUIT) (WASHER) (ALLEN KEY) 1 SET 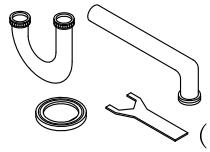 (11)	FLAT HEAD SCREW 24 PCS ϕ4x25mm (12)	FLAT HEAD SCREW DRAWER LIMIT STOPPER 6 SETS  ϕ3X12mm (13)	BASIN 1 PC  (14)	ALLEN KEY 1 PC  (15)	GLUE 1 PC  (16)

PARTS LIST

BOTTOM PANEL 1 PC 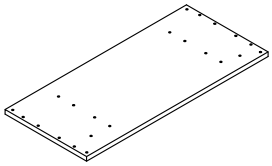 A	LEG 4 PCS  B	LEFT SIDE PANEL 1 PC 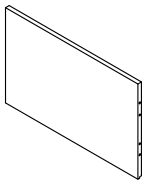 C
MIDDLE PANEL 1 PC 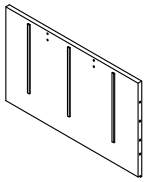 D	ACROSS BAR 4 PCS 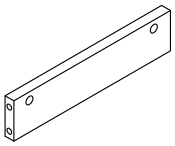 E	MIDDLE PANEL 1 PC 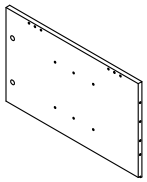 F
RIGHT SIDE PANEL 1 PC 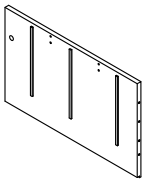 G	FRONT PANEL 1 PC 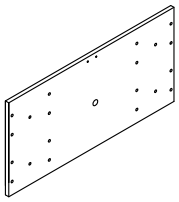 H	TOP PANEL 1 PC 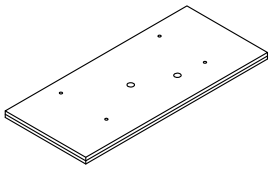 I
STAINLESS STEEL 4 PCS J	LEFT DOOR 1 PC  K	RIGHT DOOR 1 PC  L
SHELF 1 PC 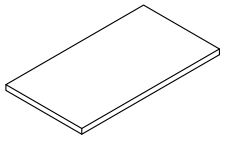 M	BACK PANEL 1 PC N	BACK PANEL 1 PC  O

DRAWER FRONT PANEL 6 PCS P	DRAWER BACK PANEL 6 PCS Q	DRAWER LEFT SIDE PANEL 6 PCS R	DRAWER RIGHT SIDE PANEL 6 PCS S	DRAWER BOTTOM PANEL 6 PCS  T	LEG 1 PC U

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE DRAWER

- USE SCREW (12) TO ATTACH DRAWER SIDE PANEL (R & S) AND BACK PANEL (Q) TOGETHER.
- INSERT DRAWER BOTTOM PANEL (T) INTO THE SLOTS OF SIDE PANEL (R & S).
- USE CAM-BOLT & CAM-LOCK (3) TO ASSEMBLE DRAWER FRONT PANEL (P) AND DRAWER SIDE PANEL (R & S) TOGETHER.
- USE ROUND BOLT (4) TO ATTACH KNOB (4) ONTO DRAWER FRONT PANEL (P).

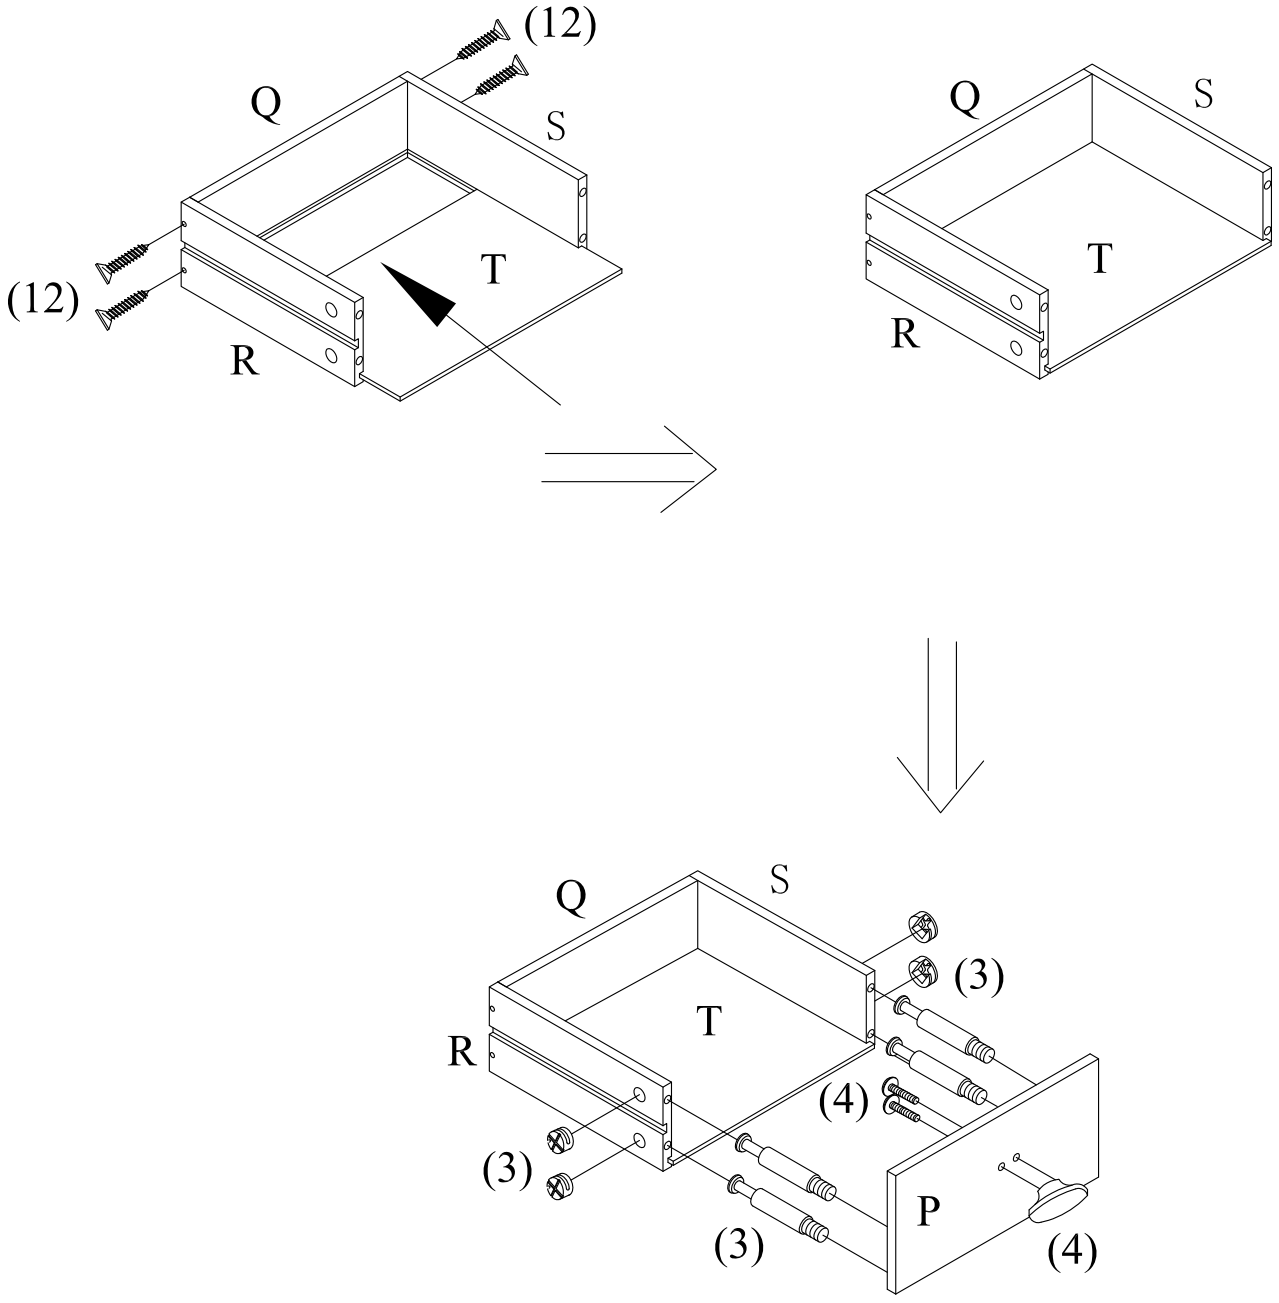

STEP 2: ASSEMBLE BOTTOM PANEL (A) AND LEG (B)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, FLAT WASHER, SPRING WASHER (2) AND WOOD DOWEL (1) TO ASSEMBLE BOTTOM PANEL (A) AND LEG (B) TOGETHER BY ALLEN KEY (15).

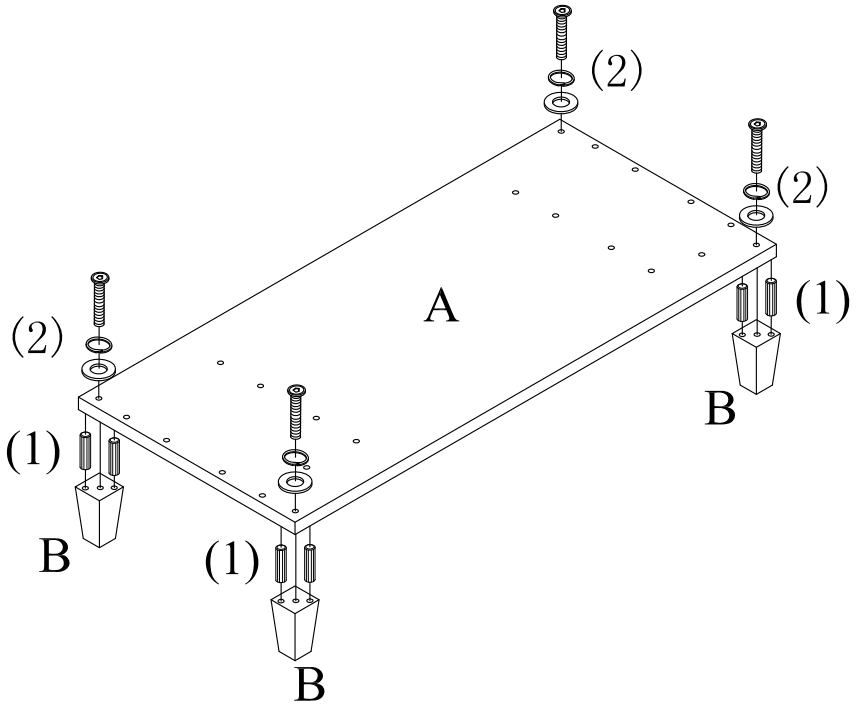

STEP 3: ASSEMBLE SIDE PANEL (C), MIDDLE PANEL (D) AND ACROSS BAR (E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM-BOLT & CAM-LOCK (3) AND WOOD DOWEL (1) TO ASSEMBLE SIDE PANEL (C), MIDDLE PANEL (D) AND ACROSS BAR (E) TOGETHER.

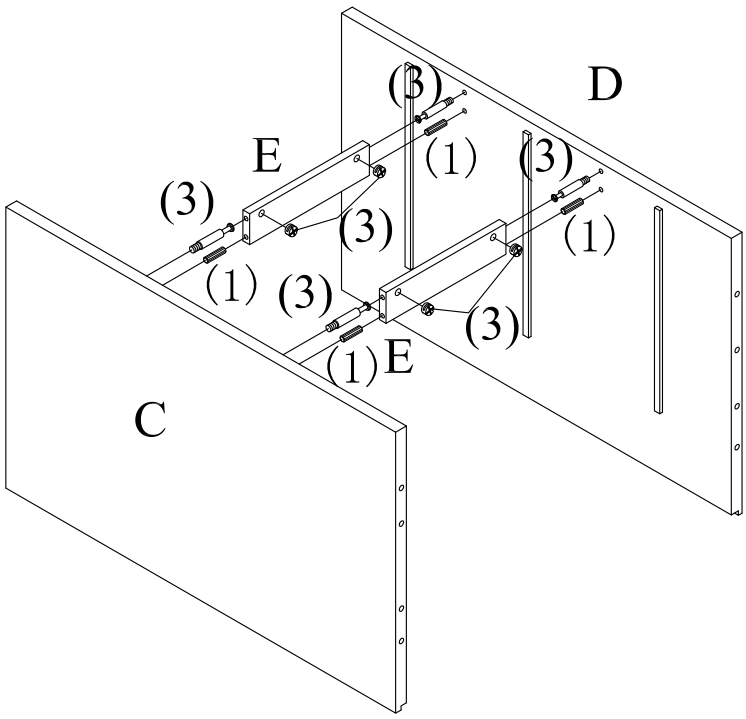

STEP 4: ASSEMBLE SIDE PANEL (G), MIDDLE PANEL (F) AND ACROSS BAR (E)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM-BOLT & CAM-LOCK (3) AND WOOD DOWEL (1) TO ASSEMBLE SIDE PANEL (G), MIDDLE PANEL (F) AND ACROSS BAR (E) TOGETHER.

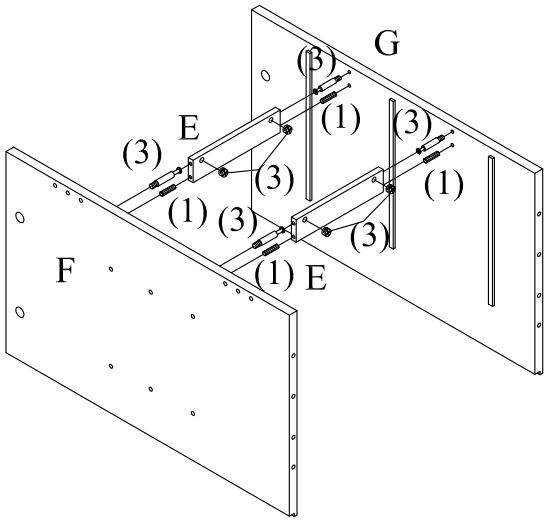

STEP 5: ASSEMBLE BOTTOM PANEL (A) AND LEG (U)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER, FLAT WASHER (2) AND WOOD DOWEL (1) TO ASSEMBLE BOTTOM PANEL (A), SIDE PANEL (C & G) AND MIDDLE PANEL (D & F) TOGETHER AS SHOWN.
- ROTATE LEG (U) ONTO BOTTOM PANEL (A) TIGHTLY.

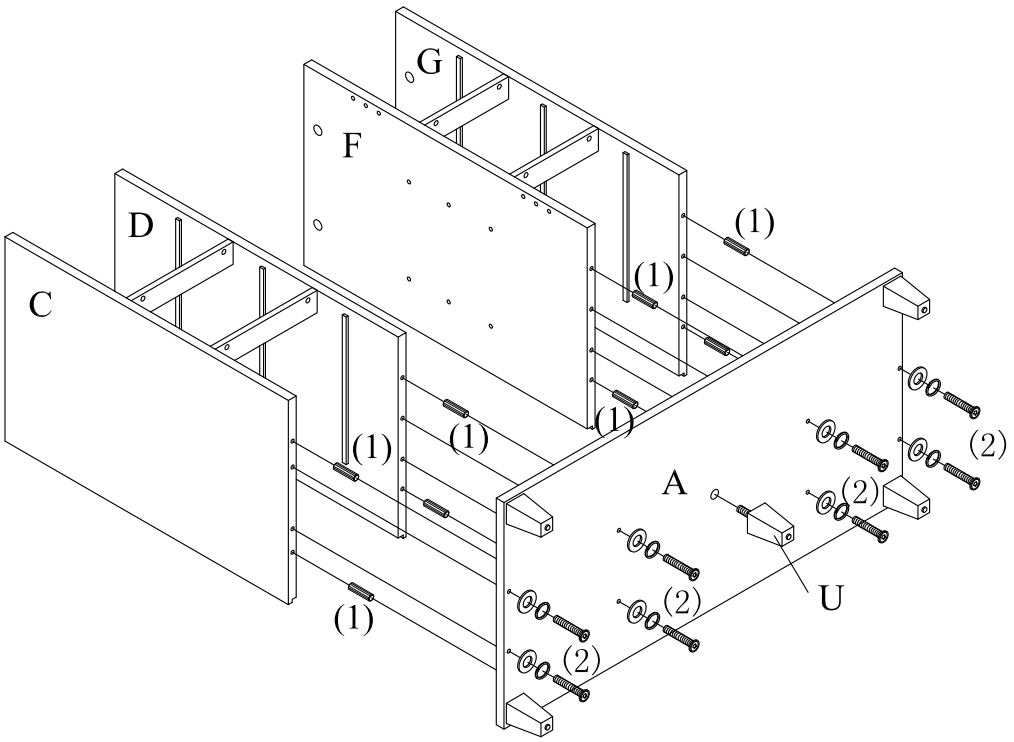

STEP 6: ASSEMBLE FRONT PANEL (H)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM-BOLT & CAM-LOCK (3) AND WOOD DOWEL (1) TO ASSEMBLE FRONT PANEL (H), SIDE PANEL (C & G) AND MIDDLE PANEL (D & F) TOGETHER.

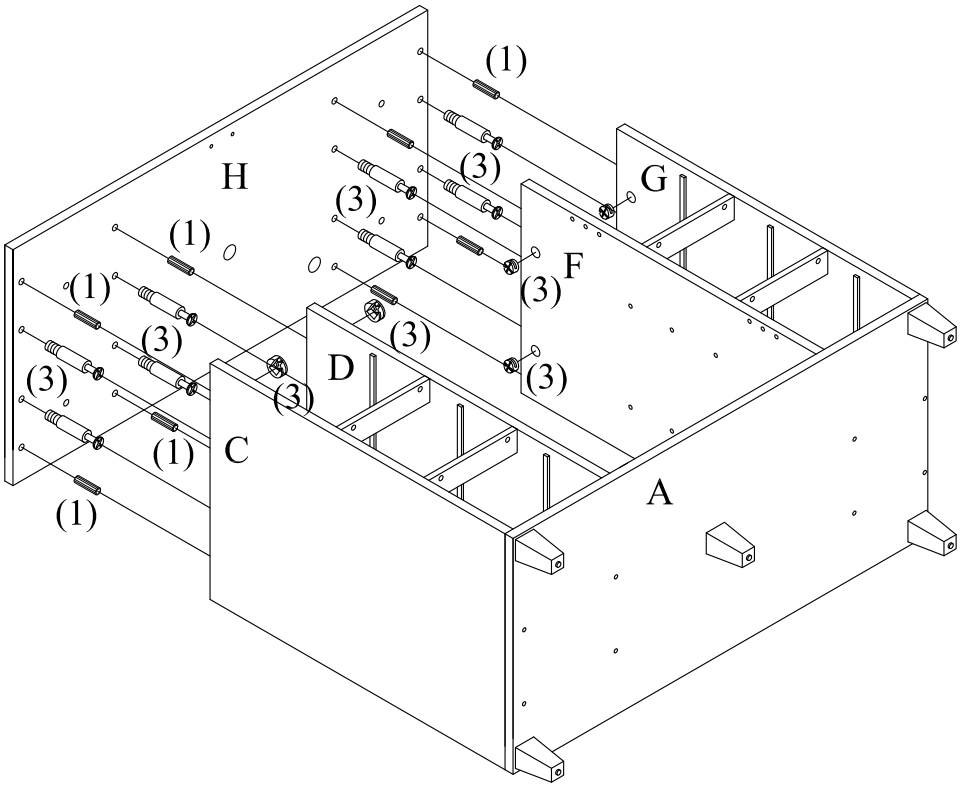

STEP 7: ASSEMBLE STAINLESS STEEL (J)

- ROTATE STAINLESS STEEL (J) ONTO TOP PANEL (I) TIGHTLY.

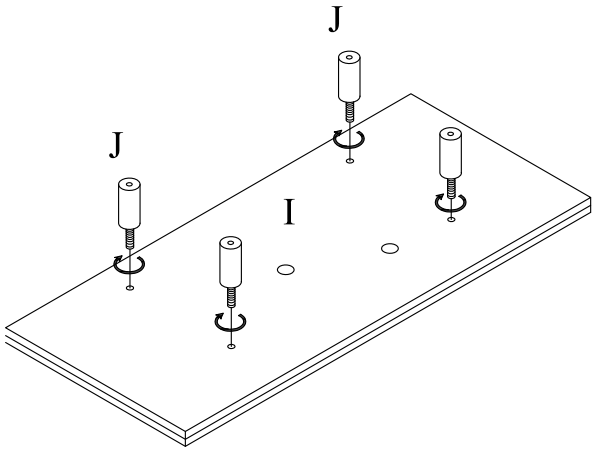

STEP 8: ASSEMBLE TOP PANEL (I) AND MAGNET LOCK (6)

- USE ROUND HEAD SCREW, SPRING WASHER, FLAT WASHER (2) TO ASSEMBLE FRONT PANEL (H) AND TOP PANEL (I) TOGETHER AS SHOWN.
- USE FLAT HEAD SCREW (6) TO ATTACH MAGNET LOCK (6) UNDER FRONT PANEL (H) AS SHOWN.

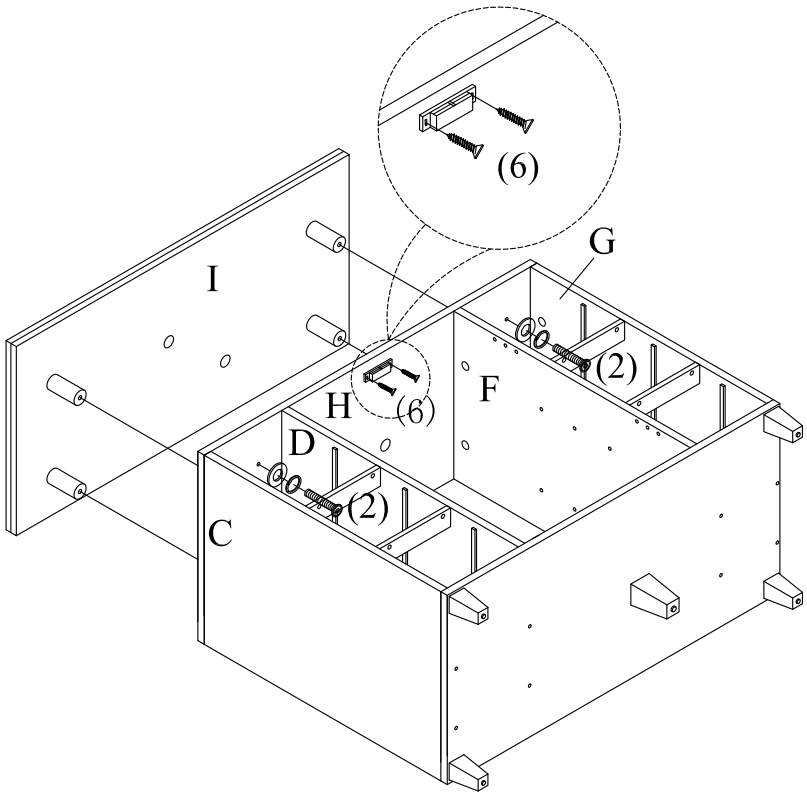

STEP 9: PLACE WASHER (11) AND DRAWER LIMIT STOPPER (13)

- USE FLAT HEAD SCREW (13) TO ATTACH DRAWER LIMIT STOPPER (13) ONTO ACROSS BAR (E) AND BOTTOM PANEL (A).
- PUT WASHER (11) ON THE TOP PANEL (I) AS SHOWN.

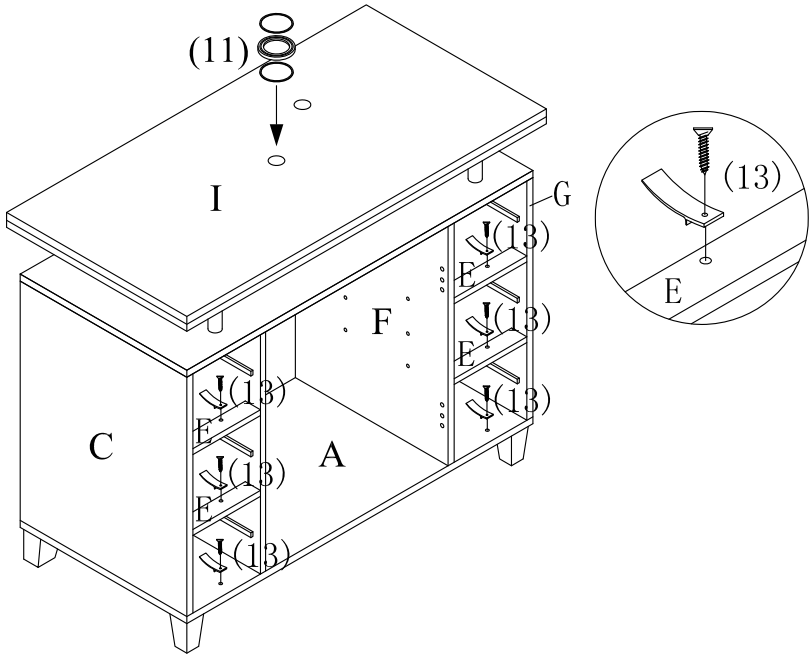

STEP 10: ASSEMBLE DRAINER (10) AND BASIN (14)

- PUT (10) PARTS ①②③ TAKE OUT.
- USE (10) TO ASSEMBLE BASIN (14) ONTO TOP PANEL (I).

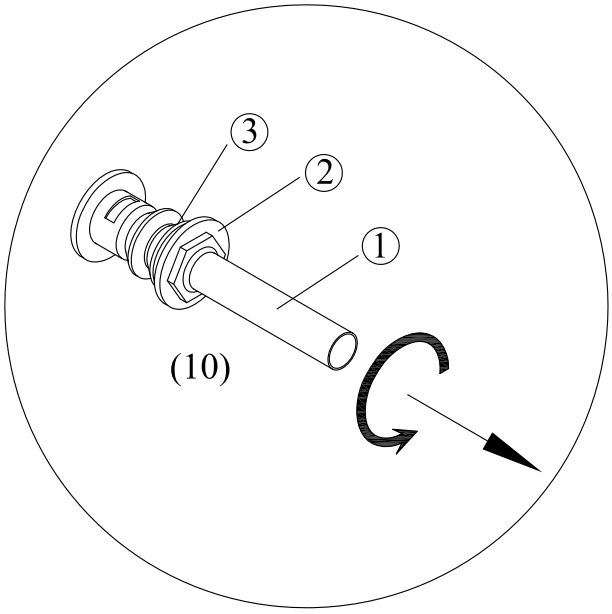

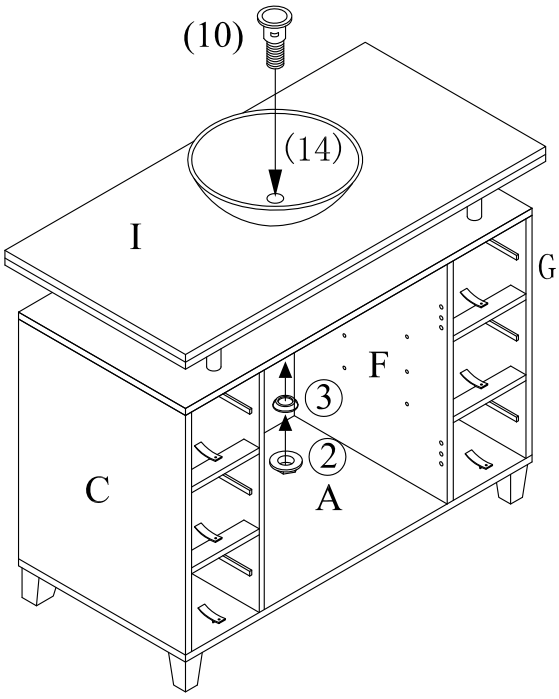

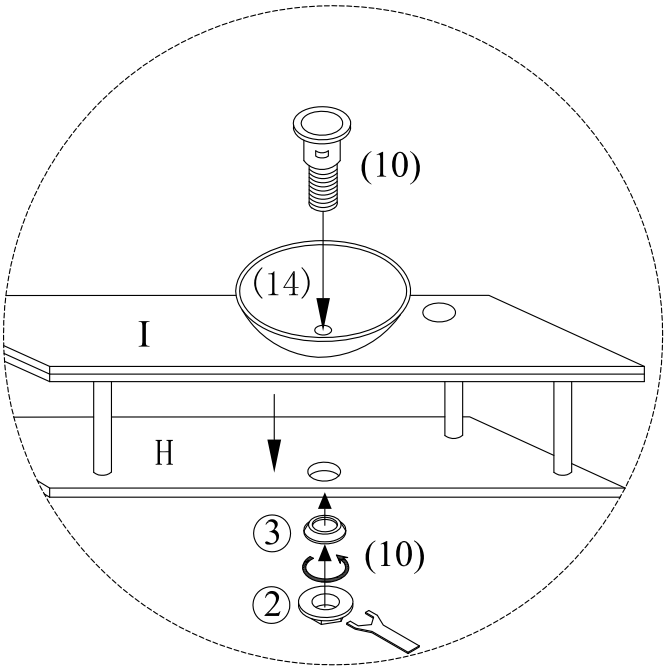

STEP 11: ASSEMBLE CONDUIT (11)

- PUT CONDUIT ⑥ & TAKE OUT ④⑤
- PLACE ④ INTO ⑦ THEN ASSEMBLE TO ⑥
- PUT ⑤ INTO DRAINER (10) THEN ASSEMBLE ⑤ TO ⑥

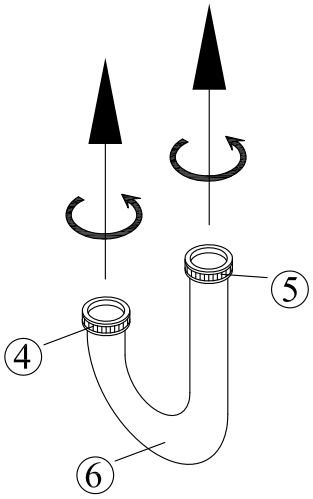

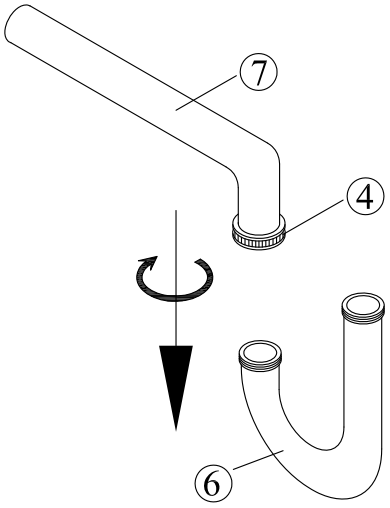

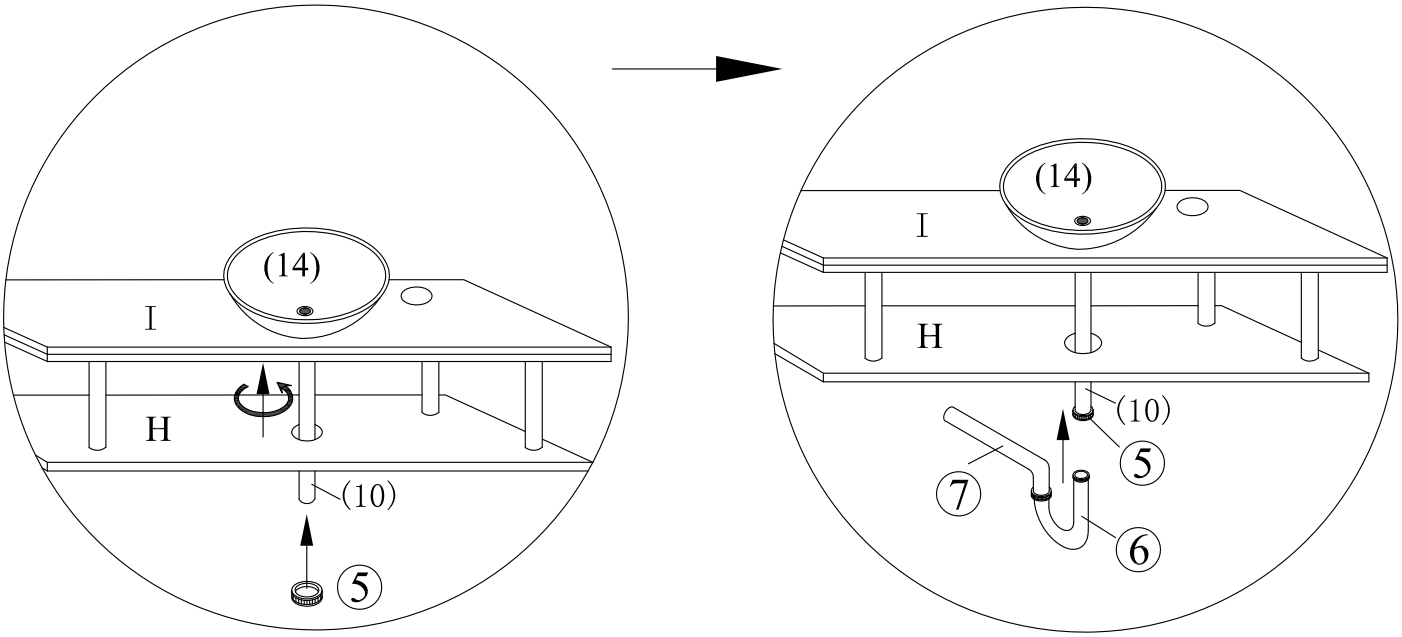

STEP 12: ASSEMBLE IRON SLICE (7), HINGE (5) AND KNOB (4)

- USE FLAT HEAD SCREW (7) TO ATTACH IRON SLICE (7) ONTO DOOR (K & L).
- USE FLAT HEAD SCREW (5) TO ATTACH HINGE (5) ONTO DOOR (K & L).
- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO DOOR (K & L).

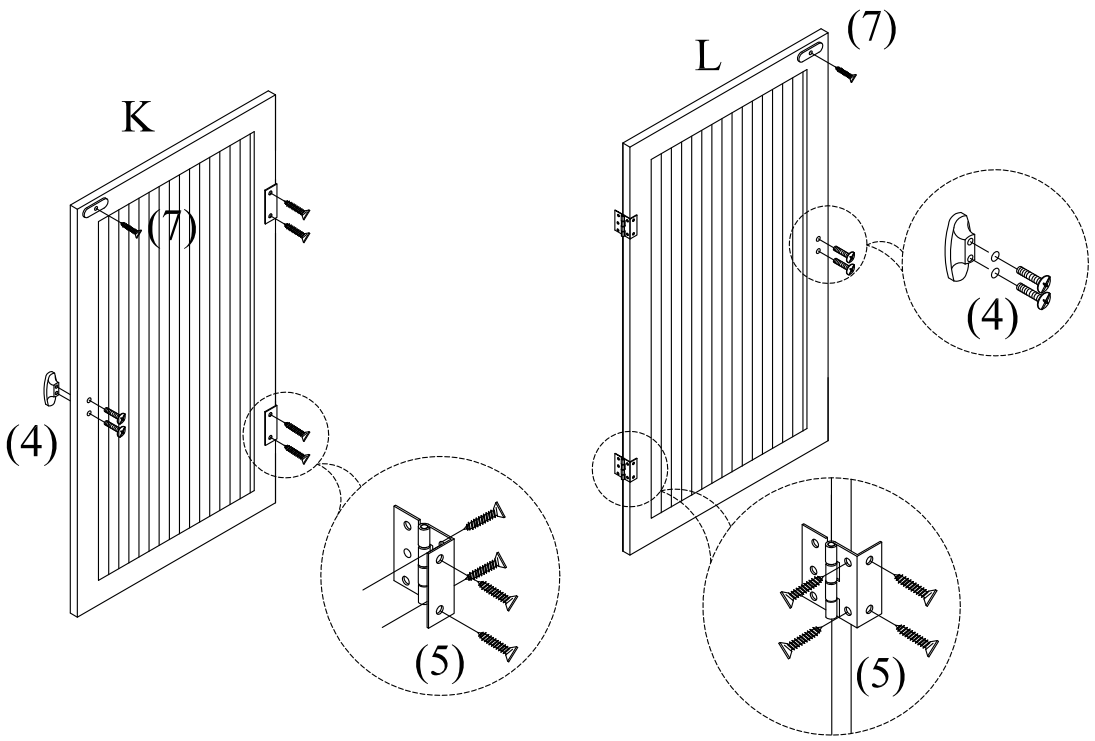

STEP 13: ASSEMBLE DOOR (K & L)

- USE FLAT HEAD SCREW (5) AND HINGE (5) TO ASSEMBLE DOOR (K & L) ONTO MIDDLE PANEL (D & F) AS SHOWN.

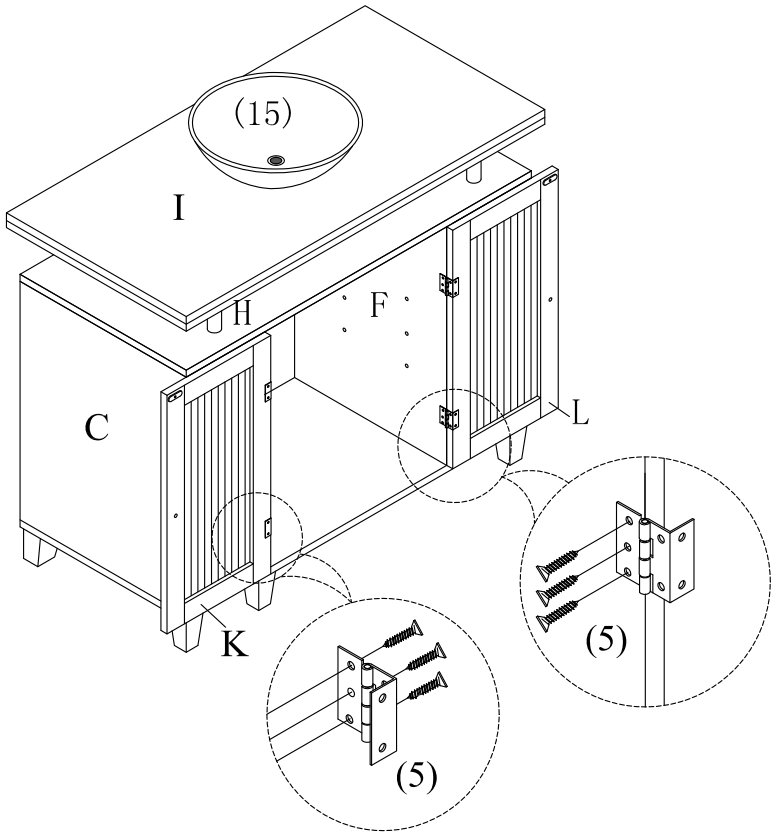

STEP 14: PLACE SHELF (M)

• INSERT SHELF HOLDERS (9) INTO THE HORIZONTAL HOLES INSIDE OF MIDDLE PANEL (D & F), THEN PUT SHELF (M) ON THEM AS SHOWN.

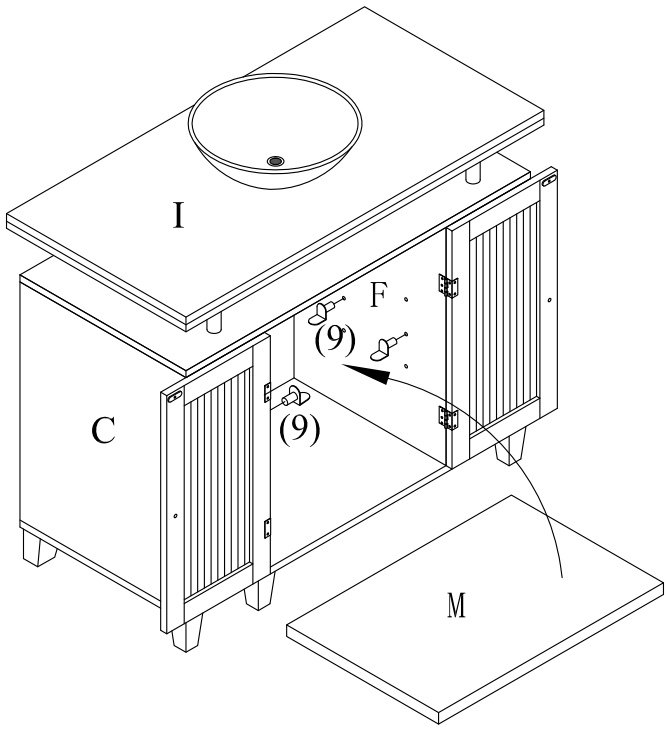

STEP 15: PLACE DRAWERS

• INSERT THE 6 PRE-ASSEMBLED DRAWERS INTO THE PRODUCT BODY PROPERLY AS SHOWN.

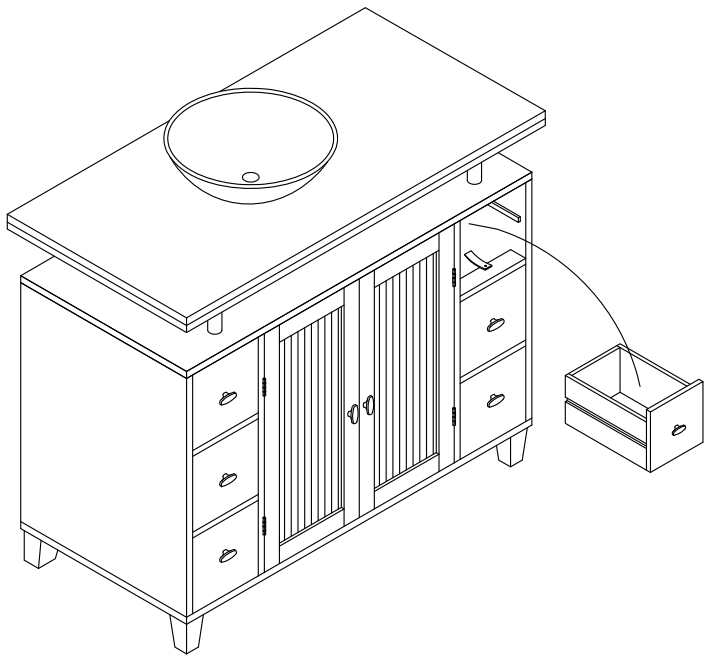

STEP 16: ASSEMBLE BACK PANEL (N & O)

• USE ROUND HEAD SCREW (8) TO ATTACH BACK PANEL (N & O) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS AND DOORS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS AND ADJUST DOORS UNTIL EVENLY SPACED, THEN ATTACH BACK PANEL.